




THERMOSKIN SPRAY UNIT

2021 MODEL

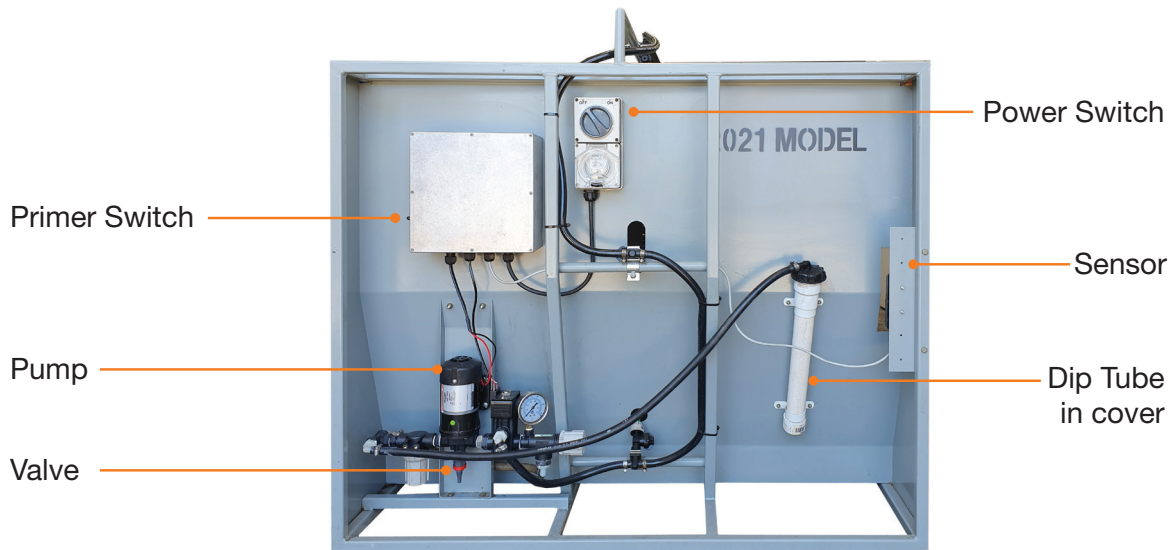


STORE THERMOSKIN PRODUCT at ROOM TEMPERATURE

Keep the Product at room temperature or above 6°C.

INSTRUCTIONS FOR USE:

1. Unscrew cap of ThermoSkin product
2. Take dip tube out of cover
3. Insert dip tube into ThermoSkin product
4. Screw cap down when dip tube is inserted
5. Connect the electrical lead to the machine and turn on power
6. Turn on the primer switch to prime the unit
7. If it does not prime there is an air lock in system: open valve under the pump to clear air lock, then check pump is working.
8. CLEAN THE UNIT when the unit is no longer required for the day. Open valve under the pump and empty. Close valve. Remove the dip tube from the ThermoSkin product and insert it into a drum of methylated spirits. Activate the unit by using the primer switch. Allow any residual product to be flushed through (approx. 30 seconds)
9. Once this cleaning procedure is complete, put the dip tube back in its cover to seal from dirt and dust.
10. Switch off power.

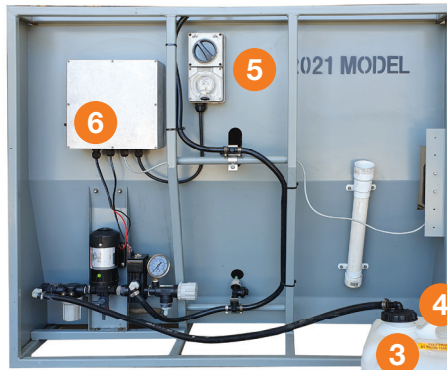

HENRY KING

TEL: 02 9534 7455 | MOB: 0418 641 645

EMAIL: henry@thermoskin.com.au | WEB: www.thermoskin.com.au